





- Connect the controller to throttle channel on the transmitter ! For OPTO version controllers, receiver must be fed from a separate battery. DO NOT take out the middle core of servoconnector (red wire) when using OPTO version controllers.
- If motor runs in an opposite direction than desired, swap any two motor phases or change the revolution direction in the program setting on PC (the PC change is available only for EXPERT controllers, not expert LT).
- It is necessary to cool the controller in operation with flowing air. Do not prevent the cooling air to get to the controller (e.g. by packing it in foam).
- The controller informs about overload and overheating acoustically (motor beeping) and also through LED.
- It is not allowed to feed the controller from any other source (such as mains power supply) than specified types of accumulators!!!
- The switch of the controller is connected in such way that even if it gets damaged the BEC will be still functioning.
- The controller is switched on by TURNING OFF the switch (applies to "s" version with switch) or by connecting batteries (applies to versions without switch).
- Do not switch off or disconnect the controller from batteries when motor runs or when it is still turning – that may lead to damage or destroyed of controller !!!

**Connection of the controller to RC equipment:**

**a) BEC version**

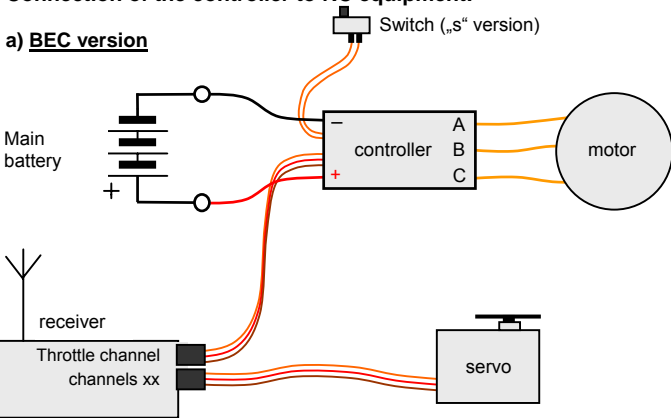


**b) OPTO version**

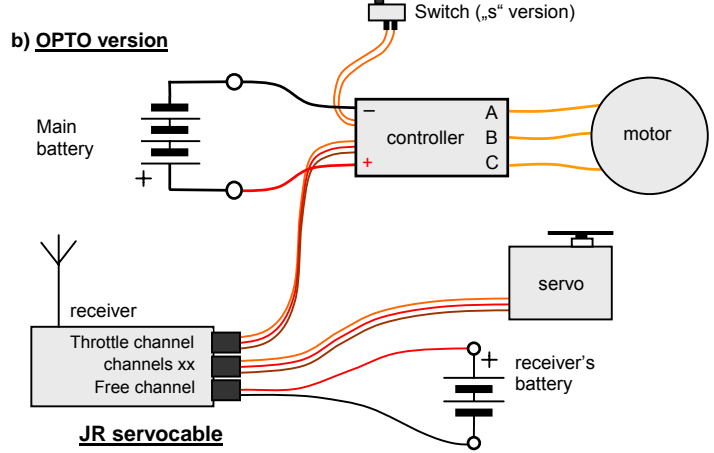

No disconnect for "OPTO" versions

**Note:**  
**(for BEC versions only !!!)**  
If you need to feed the receiver or servos from some other source carefully take out the central core of the servo cable connector. The taken out core of this conductor must be properly insulated.!

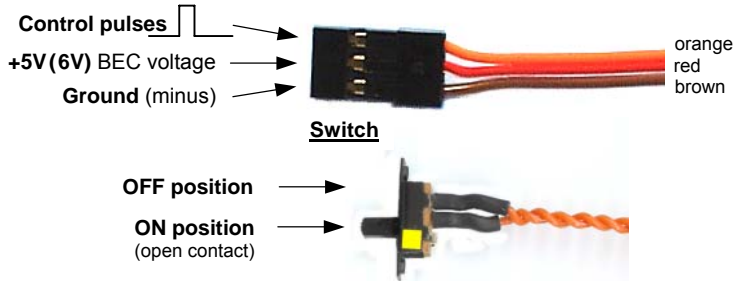

**MEGA BEC:** controllers up to 12 cells are equipped with BEC. The BEC can hold peak currents up to 4A and loss power loads which are significantly big but has its limits. It may not exceed 20W. It is possible to determine for example current which may be drawn from BEC under given load and voltage and also find out for how long from the graph. The power losses of the BEC warm the controller up. It is necessary to remove the generated heat by airflow. If the BEC is loaded with the power loss >5W pauses for cooling are necessary so that the average power loss is ≤ 5W. REMEMBER that the controller is also heated by the power loss generated in the motor part !

**Power loss of 5V BEC:**  $(U_{BATT} - 5V) \times \text{current } I$   
**or for 6V BEC:**  $(U_{BATT} - 6V) \times \text{current } I$   
(it is favorable to use axis with difference of voltages  $U_{BATT} - U_{BEC}$ )

**Example:** (see graph) if voltage of batteries is 10,5V it is possible to draw current of 1,8A continuously for 10 sec. when the power loss of BEC is 10W. If the load would only take 5 sec. the power loss may be 15W and it is possible to draw current up to 2,7A.


**When exceeding the maximal limits of current or power losses, BEC may be destroyed and the model may be uncontrollable !**

Please, notice that servos loaded with the control surfaces (rudder, ailerons etc.) in the air draw many times more current than when you move them on the ground ! **Measure with Black Box !**

**Note:** be careful when determining the range of the set, especially when using more batteries – in case of signal loss servos might turn to their maximum which would cause significant rise in drawn current. This might lead to a power overload of BEC with all its consequences. The danger is lower with receivers which set a defined servo position when loss of signal occurs.

**CONNECTING BEC:** if two controllers are used in a model, BEC can be connected in two ways:

- if each controller is switched on separately (by switch or by connection to batteries) it is possible to use only one BEC – it is necessary to take out the middle core of servoconnector of one controller
- if a simultaneous switch on of both controllers is ensured (connected „+“ and „-“ wires of both controllers, without switches) both BECs can stay connected. This will also increase allowed current and power loads (aprox. twice) of BECs connected in this way.

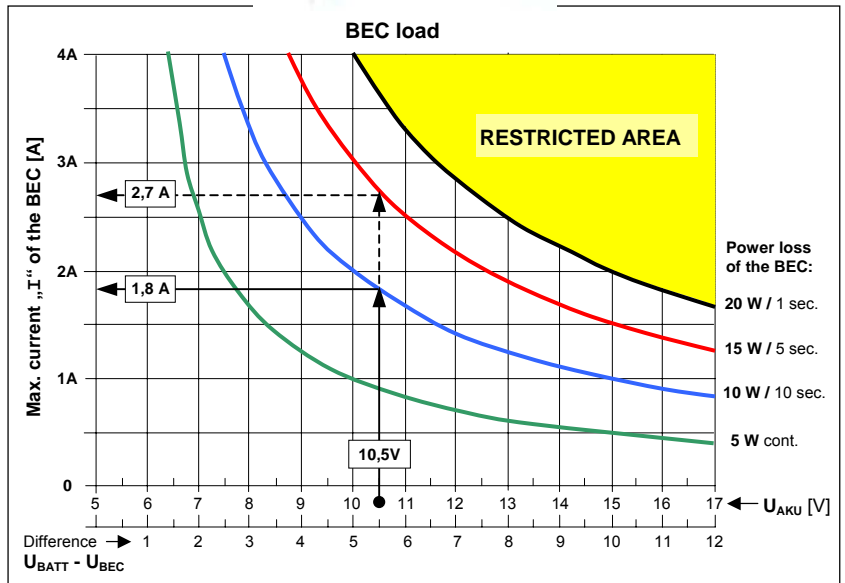

**SECURITY WARNING:**

**Always disconnect the accumulators when not operating the model !!! Do not leave model with connected accumulators unattended !!! Please notice that running motor with propeller is very dangerous !!! Do not charge batteries when connected to the controller !!! If the controller is connected to batteries do not stay in the reach of the propeller !!!**

- **NOTICE, reversal of poles on wires to the batteries will destroy the controller !** (This however, may not show immediately, but in some later starts or flights)
- **Short cut of these wires together (when batteries are connected) or short cut of these wires to the feeding voltage results in damage or destroy of the controller !**
- **Make sure that the motor is in a good condition. A faulty or damaged motor (mechanical damages, shortcuts on winding, etc.) may cause damage or destroy of the controller as well as the feeding cells.**

**2) WITHOUT PROGRAMMING – BASIC MODE / Quick Start (Go to water):**





In the factory settings (basic mode) the controller is set automatically and meets the requirements of most users without any changes. This means that no programming is necessary, it is possible to go flying right after opening the package.

The controller is preset:

- NiCd/NiMH cells, number of cell is determined automatically (for charged battery). For Lipol cells you must set parameter "B" ! (Details below).
- all other parameters is default.

If this setting does not suit you, see section 3, 4 or 5 (programming) for description of settings change.

**The brake (switched off or on) is always set according the throttle stick position at the moment when the controller is switched on.**

<p><b>Starting with the brake:</b></p> <ol style="list-style-type: none"> <li>1. switch the transmitter on</li> <li>2. throttle down (min. throttle)</li> <li>3. turn the controller ON</li> <li>4. 1 × BEEP</li> <li>5. you may start (max. throttle position is setup automatically)</li> </ol> 	<p><b>Starting without the brake:</b></p> <ol style="list-style-type: none"> <li>1. switch the transmitter on</li> <li>2. full throttle (max. throttle)</li> <li>3. turn the controller ON</li> <li>4. 2 × BEEP</li> <li>5. throttle down up to 10 sec.</li> <li>6. 1 × BEEP</li> <li>7. you may start</li> </ol> 	<p><b>Note:</b></p> <p>If in the starting position of the throttle stick (min position), 2 × BEEP can be heard, change the norm of deflection of the throttle stick on the transmitter</p>  <p>If in the starting position of the throttle stick (max position), 1 × BEEP can be heard, change the norm of deflection of the throttle stick on the transmitter.</p> 
---	---	--

**3) Programming / obtaining data from controller using PC (without BB\_03 module):**

If you wish to program using PC or obtain data from the controller, USBCOM module (line USB, order number 0421) are necessary for connecting the controller to the PC. Also a SW which is a part of the communication module is needed.


Programming the controller using PC will make the process of setting parameters easier and clear.

Obtaining data about last flight will help determine an optimal power of your model so that both power and technical possibilities of your controller / motor / batteries are fully used and that the possibility of overloading them is avoided at the same time.

To install, and obtain data from controller and program controller please refer to instructions in manual for your communication module.

The overview of data that can be obtained from controller (from last flight):

- average current at full throttle in stable state
- maximal peak current
- end voltage of battery
- maximal temperature of the controller
- min. throttle position
- max. throttle position
- max. revolutions

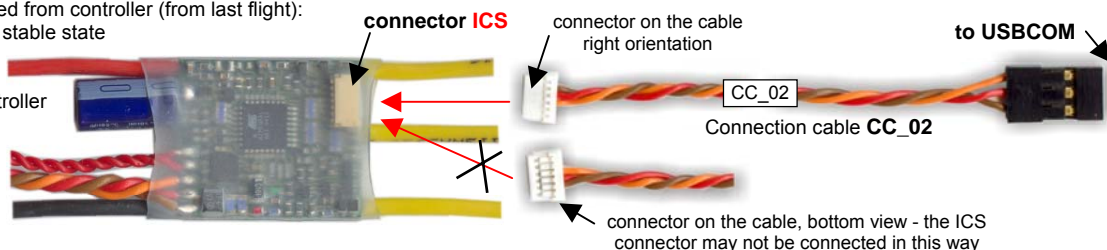

**PC window:**

#### 4) Data recording, data loading and programming with BB\_03 module

BB-03 brings a completely new solution for optimization and setting of the power units in your models. The complete instructions may be found in the manual to Black Box BB\_03.

**Only a brief overview to give an idea:**

When „Read data from Black Box“ button is pressed, data recorded in BB are being drawn as curves into graph. When the whole recording is read-out (here 52.5seconds) - all data are displayed on screen. The scale is set automatically according to the biggest displayed value.

The screenshot displays the CONTROLLER software interface, which is divided into several sections:

- File Menu:** Includes options for language selection (Czech, English, German) and buttons for "Read data" and "Write Data".
- Controller Information:**
  - Controller Name: 2516-3 Z
  - Controller Version: 5.26
  - Last Change: 26.10.05
- Throttle Settings:**
  - Throttle min. [ms]: 1.11 (range: 0,70 ms - 1,40 ms)
  - Throttle max. [ms]: 1.94 (range: 1,70 ms - 2,30 ms)
- Motor Specifications:**
  - Number of poles: 14
  - Gear ratio: 1: 1.0
  - Max. revolutions [rpm]: 8040.7
- Performance Metrics:**
  - Max. peak current [A]: 84
  - Current in full throttle [A]: 24
  - Voltage of battery at switch off [V]: 11.77
  - Max. temperature [°C]: 46
- Graphing and Settings:**
  - user settings flight characteristics:**
    - Checked: Current [A], BEC voltage [V], Voltage [V], BEC current [A], Uo [V], BEC losses [W], Ext. voltage [V], Mark [ms], Revolution [x1000 rpm], Throttle [ms].
    - Unchecked: Temperature [°C], Ext. temp. [°C].
  - Graph:** Shows a multi-line plot of various parameters over time (0 to 50 seconds). A red arrow points to a specific data point on the graph.
  - Graph Note:**
    - wire section [mm<sup>2</sup>]: 1,5
    - wire length [mm]: 68
  - Buttons:** "read date from Black Box", "Export to file (\*.xls)", "stop reading data from Black Box", "Import from file (\*.xls)".

The bottom part of the image shows a zoomed-in view of the graph and settings, with a red arrow indicating the zoomed area. The zoomed graph shows a detailed view of the current (A) and voltage (V) curves over a 14-second period. The settings for wire section (1,5 mm<sup>2</sup>) and wire length (68 mm) are visible.

It is possible to choose which curves (data) will be shown by clicking on the box next to its name [1].

It is also possible to only view selected curves.

Also the color of any curve may be changed – move the cursor to the colored name of the curve [2], then right click and color toolbar will pop up. Now you may change the color.

The „CONTROLLER“ window may be open in the full screen as is usual with in Windows.

To zoom in, left click on the mouse and choose the area to zoom in by moving the mouse from the areas left upper corner to its right bottom corner. To move with the zoomed area hold the right mouse button.

The button „Export data (\*.xls)“ is used to export the data under any name **together with note** which may include important data of this recording (such as model, motor, throttle, ...) for easier orientation in measurement comparison.

Data may be shown any time later using „Import data (\*.xls)“ and choosing requested flight recording from the PC memory.

The exported data (in excel format) may be processed in Excel (e.g. to create power consumption  $P_{mot} = \text{Voltage} \times \text{current}$ ), draw graphs, work with recordings, etc.

## 5) Programming with transmitter:

All programming can be done through transmitter and receiver with which the controller will run. After programming the data will be saved (until possible next programming) and the controller must be switched off. After switching it on again it is ready to fly with the newly set parameters. If after switching on, the throttle stick is not in the min position the controller waits for it to get there (safety precaution) – if the throttle is in its min position you may take off immediately. If transmitter or receiver is changed for a different one, it is recommended to do the programming again – it is enough to program only the first parameter again so that new parameters of control signal are saved.

### How to program the desired “value” in parameter you are setting (basic procedure in each parameter):

Move the throttle to ½ throttle, LED will be switched off 2x (twice) and motor beeps 2x. Move throttle back to min position, LED will be switched off once and motor beeps once. Repeat this procedure (1/2 throttle – min throttle) as many times as is the number of parameter (according to the table) you wish to set. **For example:** for setting the **number 3 in parameter E** (which is timing 10°) repeat the whole procedure (1/2 throttle – min throttle) **3x** (you certainly have to be in parameter E).

**The programming of each parameter will be finished** when you move the throttle from min position to the full throttle – LED will be turned off 3x and motor will beep 3x, then move the throttle back to min position, LED will be turned off 1x and motor will beep once – the parameter is programmed to the value you have chosen and saved (**this sequence is marked as “ENTER”**). This also automatically gets you to next parameter. After the last programmed parameter the controller must be always switched off first!

**It is not obligatory to program all parameters** – it is possible to switch the controller off after any parameter which is correctly finished by ENTER sequence. The following parameters will not be changed and all the preceding will be saved.

**If you do not wish to change some parameter** (you wish to preserve its last value) you directly set full throttle when programming it (no ½ throttle – minimum procedure, but directly ENTER). The parameter value stay as it was before and the controller will get to the next parameter programming

**EASY return to default settings:** start the controller with full throttle as if you were going to program. After 10 seconds the controller will beep 3 times. Do not move the throttle to break position but wait another 5 seconds for 4 beeps. After those, move the throttle to break position (in 3 seconds) and the default setting is resumed and BASIC mode is set. If the throttle is not moved to break position in the 3 seconds time, the setting will not change and controller waits for switch off.

## The programming:

### I) Turn the transmitter on with throttle stick in max position !

II) Turn on the controller. After 10 seconds (++) the controller will beep 3 x and LED will blink and stay turned on. Now you have 3 seconds to move the throttle back to zero. If in this time limit you do not put the throttle in min position the programming process will end and the controller will be turned off. **Its next operation is possible after switching off and then turning on by switch (disconnecting and connecting of batteries).** If you put the throttle to zero in this time limit the motor will beep 1x and the LED will be turned off 1x. Now you are in the programming mode and may start to program parameters according to the procedure described above.

(++) **If before this programming the BASIC mode was set, the motor will beep 2x after switching on the controller, do not take care of this, wait for 3 beeps.**

### III) Parameter A – mode choice BASIC / BOAT:

#### 1) **You do not wish to do any programming and prefer to use the default settings (BASIC mode):**

Move the throttle to ½ throttle, LED will be switched off 2x (twice) and motor beeps 2x. Move throttle back to min position, LED will be switched off once and motor beeps once. Confirm this by moving the throttle from min position to full throttle – LED will be switched off 3x and motor beeps 3x. Then go back to min position (LED switches off once, motor beeps once). The default setting is set. It is possible to follow with programming number and type of cell, parameter B (necessary for more than 5 Li-xxx cells and NiCd battery). After programming B parameter the controller switch off.

#### 2) **BOAT MODE (full programming):**

Move the throttle to ½ throttle, LED will be switched off 2x (twice) and motor beeps 2x. Move throttle back to min position, LED will be switched off once and motor beeps once. Repeat this procedure once more (you need to set value 2 of this parameter). Confirm this by moving the throttle from min position to full throttle – LED will be switched off 3x and motor beeps 3x. Then go back to min position (LED switches off once, motor beeps once). The aircraft mode is now set and you may proceed to program the next parameter B (the next ones).

### IV) parameter B – type (and/or number) of cells:

According to „How to program the desired “value” in parameter you are setting“ (see above), set the desired value of this parameter from 1 to 10 (look up in programming table). Now by using “ENTER” procedure (full throttle – min throttle) this parameter will be set and saved and you may proceed to program next parameter.

### V) parameter D to J (parameter „H” – BEC voltage – in the OPTO versions is automatically jumped):

Set the desired value according to the table) for each parameter. End and save each parameter by ENTER sequence which will also move to the next programmable parameter. Parameters which you do not wish to change may be skipped by directly performing ENTER sequence. After programming the last desired parameter **the programming is finish by performing ENTER.**

### VI) Switch the controller off.

## Advantages of TMM® controllers **Z-series** line:

- compatible with measuring device Black Box BB\_03 (measuring and recording of all important parameters during flight)**
- programming using ICS connector – it is not necessary to disconnect the controller from the receiver upon each programming**
- possibility of immediate use, no programming required
- easy programming (setting) important parameters using transmitter or PC (for more information see „Programming“ part)
- important data measured in operation of controller may be obtained using PC – great for optimal power setting**
- outstanding protection and management of Lipol/Lion (very important) and NiCd/NiMH batteries**
- possibility of setting residual energy for BEC (switching off voltage)**
- perfect masking of signal interference and losses
- extremely fine throttle step (1023 steps)
- very soft starts
- motor and controller overload protection
- small dimensions and weight
- very powerful BEC (MEGA BEC)** (for more information see on the catalog, CD, or www pages: „BEC – advantages of MEGA BEC conception“)
- possibility for setting 5V or 6V for BEC**
- all controllers is made with switch also (safe connection)

## Using abbreviations

ACF	- automatic current fuse	IPR	- intelligent power reduce
ACR	- automatic current reduce	LED	- light emitting diode
APS	- automatic parameter setup	PWM	- pulse width modulation
BEC	- battery eliminator circuitry	RPC	- radio priority circuit
BLDC	- brushless DC motor		



**Meaning of each parameter:**

- Parameter A – mode:** choice of modes (BASIC / BOAT)
- **BASIC:** **basic mode with default settings.** Lipol cells are default settings! Enables the user to start flying immediately. Brake must be set ON or OFF after each switch ON of the controller again. **Only type and number of cells can be set permanently.**
  - **BOAT:** **all parameters can be set by user.** All parameters are permanently saved. After switch on the controller is immediately ready for use with the saved settings. Throttle must be in min position to start – a safety precaution to avoid unwanted start of motor. **When change receiver (or transmitter), we recommended set min. and max. throttle position again** (go to programming mode only, it is no need set other parameters). Some of receivers have no the same output pulse width for the same transmitter. When is pulse width for minimum throttle position higher, controller wait for min. throttle position (remember pulse width) and this value no coming. It is the same situation as you no move throttle stick to minimum position and controller wait and wait.
- Parameter B – battery:** sets type of batteries – NiCd, NiMH or Li-Ion, Li-Pol (automatic number setting up to 5 cells) and number of Li-xxx cells directly. It is necessary to specify a type of cells to ensure correct behavior of controller and for reliable protection of battery. For Li-xxx cells it is also recommended set number of cells. You can choice automatic number setting – correct number setting is possible only for full or partial charge battery. For discharge battery is not possible automatic setting correct number of cells. For 2 Lipol cells set automatic setting.
- Parameter C – brake:** **not used, ESC work without brake, parameter is automatically jumped**
- Parameter D – acceleration:** Enables to set acceleration in 6 levels. Set according to your needs. *The faster acceleration is set, the higher peak currents will occur at start – this may lead to a cut off by current fuse of the controller. These currents may reach up to 10 times of nominal current! Therefore set with consideration so the speed of reaction was high enough but not unreasonably fast for your model.*
- Parameter E – timing:** here you may choose (and experiment with) 5 different timings. **The sixth possibility is automatic timing which is strongly recommended because it ensures optimal setting and maximal efficiency.** While using the definite values of timing and higher timing you may rise the motor revolution or the twisting moment a bit but always at the expense of lowering the efficiency. If you wish to have higher revolutions it is better to use different motor or more cells because lower efficiency cannot be made up for. High value of timing may in unsuitable combination with some motors damage the controller !
- Motor with high inductance in rate to maximal current,** for example AXI 4120, 4130, ..., some "LRK" motors, lots of motors from CD ROMs, etc.) setup timing 5° or 10° or 15, automatic timing may not be optimal. The need of setting different timing can be easily recognized – motor loses synchronization for higher loads.
- Parameter F :** **not used, ESC slow power reduce for empty battery, parameter is automatically jumped**
- Parameter G – Residual energy for BEC:** this parameter sets the moment in which the revolutions will start to be reduced or cut off motor when battery are getting low. If this parameter is set appropriately, the start of motor revolutions reduction will be close to the point when batteries are almost discharged. It will set the amount of residual energy for BEC. **This is very important for Lipol cells.**
- Parameter H – BEC voltage:** enables to set voltage of BEC to standard 5V or to higher 6V. Higher voltage could be advantageous if you need higher power and speed of servos. **This parameter is automatically jumped in OPTO versions** (after „G“ parameter is programming directly „I“ parameter).
- Parameter I – reverse:** This parameter sets a reversed direction of motor rotation without the need of swapping any two wires to motor.
- Parameter J: interference masking**  
This parameter enables to set an optimal cooperation between receiver and controller when loss of signal occurs or when the signal from transmitter is noisy. Many processor receivers take care of this problem themselves (not like analog receivers). Controller has also very powerful ability to suppress losses due to interference. The cooperation of these two parts (controller and receiver) then may not be optimal. In such cases set this parameter to "no". The controller in this set up, has some of the masking algorithms suppressed and leaves the receiver to handle the situation – the cooperation of controller and receiver is than much better. When using analog receivers (and some digital ones) it is recommended to leave this parameter set to "yes", then the controller takes care of masking the loss of signal and interferences completely by itself. If you are not sure how your receiver solves this problematic, try both settings and choose the better one.

**Programming table:**

Pa-ram	Value of parameter →	0 (= ENTER)	1	2	3	4	5	6	7	8	9	10
<b>A</b>	<b>Mode choice</b>	next parameter	<b>„BASIC“</b>	„BOAT“ mode (full progr.)	-	-	-	-	-	-	-	-
<b>B</b>	<b>Battery type*)</b>	next parameter	<b>NiCd, NiMH</b>	Li-xxx automatic / 2	Li-xxx 3 cells	Li-xxx 4 cells	Li-xxx 5 cells	Li-xxx 6 cells	Li-xxx 7 cells	Li-xxx 8 cells	Li-xxx 9 cells	Li-xxx 10 cells
<b>D</b>	<b>Acceleration (from 0 to 100%)</b>	next parameter	0,16 sec.	0,29 sec.	<b>0,41 sec.</b>	0,66 sec.	0,95 sec.	1,3 sec.	-	-	-	-
<b>E</b>	<b>Timing</b>	next parameter	<b>automatic</b>	5°	10°	15°	20°	25°	-	-	-	-
<b>G</b>	<b>Residual energy for BEC</b>	next parameter	<b>Nixx: 0,80 V</b> Li-xxx: 2,90 V	0,84 V 3,00 V	<b>0,88 V</b> 3,10 V	0,92 V 3,20 V	0,96 V 3,30 V	1,00 V 3,40 V	1,04 V 3,50 V	1,08 V 3,60 V	1,12 V 3,70 V	1,16 V 3,80 V
<b>H</b>	<b>BEC voltage (only BEC versions)</b>	next parameter	<b>5V</b>	6V	-	-	-	-	-	-	-	-
<b>I</b>	<b>Reverse</b>	next parameter	<b>no</b>	yes	-	-	-	-	-	-	-	-
<b>J</b>	<b>Interference masking</b>	End of programming	yes	<b>no</b>	-	-	-	-	-	-	-	-

Note: Default setting is marked as **bold**  
**Only type and number of cells can be set permanently in BASIC mode ! (all other parameters is default)**

\*) maximal number of Lipol cells for a controller is given in technical specifications for each controller (**page 8**)

**Standard setup: New controller has factory setup (default values):****Basic mode (see on page 3, point 2):**

- NiCd/NiMH cells, automatic number of cells
- Acceleration time 0,41 sec.
- Timing automatic
- Residual energy (cut of voltage) 0,88V/cell
- BEC voltage 5V
- Interference masking no (standard)

**Protective and safety mechanisms of TMM® controllers:**



**Accumulators are protected** in four ways.

- 1) Firstly, due to the use of automatic current fuse (ACF) the possibility of current overload of accumulators (and their possible damage) even at crisis points is significantly reduced.
- 2) Secondly, the used system of intelligent power reduce (IPR) always ensures through measurements of number of voltage, currents, accumulator condition and calculations an optimal point of starting continuous reduction of motor performance (or the point when motor is switched off or point in which the motor power is reduced and then set back – according to the setting of parameter F”) so that accumulator cells do not get extremely discharged – which is very important specially for Lipol cells.. This, not mentioning other advantages, reduces the possibility of reversal of poles of lower cells (applies mainly to NiCd / NiMH cells).
- 3) This system at the same time **enables retaining defined energy for BEC (perfect RPC)** in controllers that have BEC which is of great significance for flying models (a crash due to running out of energy for receiver and servos can be avoided) . The amount of residual energy can be user set.
- 4) the automatic current reduce (ACR) due to which a drop in voltage for BEC under extremely big current load (for every given controller) while motor starts does not occur.

When switching (reducing power) the motor off at solid boundary as it is with regular controllers (a) there is only very little energy remaining for BEC, particularly for 8 or more Nicd / NiMH cells in battery pack. This mainly applies for controllers with the switching of boundary at 5.5V. The better accumulators are used the less energy (time) is left to land (standard ESC).

Comparing to this, TMM (b) ensures the remaining energy to be big enough; it is also possible to modify its size according to user needs (bigger for gliders). This energy is certainly insignificant as long as duration of running the motor is concerned, but it is very significant for feeding BEC.

Graphs below show situation with 3 Lipol cells. In graph a) a regular controller situation is depicted – controller is Lipol compatible and has a solid boundary of switching of. In graph b) a behavior with TMM® controller is shown – with a boundary on a discharging curve of inner voltage of battery..

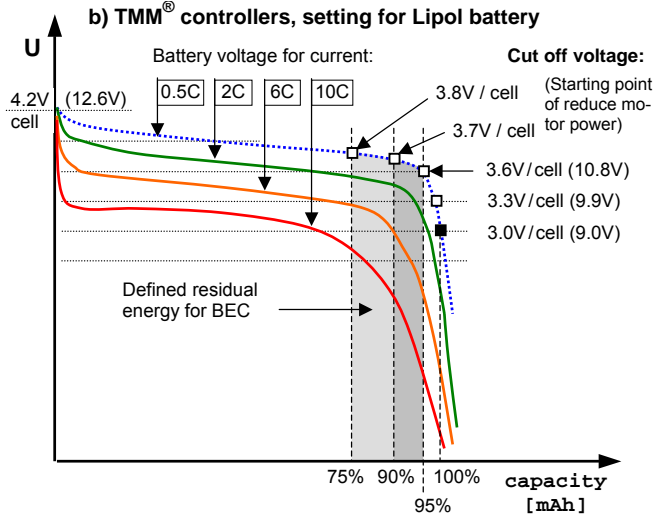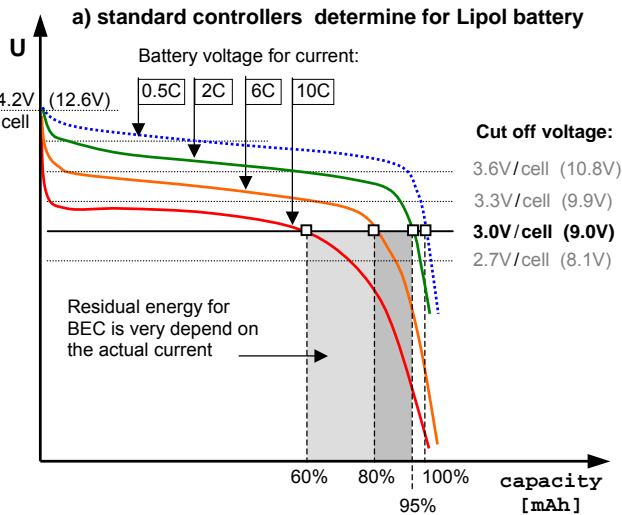

Regular controllers (even Lipol compatible) have either a solid switching off voltage (for example 3V per cell) or it is possible to set this value. For example for set boundary 3V per cell the controller is switch off or it starts to reduce revolutions when this value is reached no matter how big the drawn current is. **This means that the residual energy significantly changes according to a instantaneous current load of batteries** (and also according to inner resistance of the cells) from 0 to 95 % - depending only on the set voltage boundary. If the example on the graph above is considered with a set boundary of 3V per cell the controller will switch off when drawn current is 10C when there is still 40% of energy still left, while for 2C current when only 5% of energy is left. For boundary of 3.3V per cell the controller would switch off for currents of 10C when only few percent of energy were consumed while for 2c after 92% of energy would be consumed..

TMM® controllers handle the situation quite differently. The switching off voltage is always recalculated into „inner“ voltage of the battery – therefore is independent on both drawn current as well as inner resistance of the accumulator. **This means the set residual energy is always the same and does not depend on currents and inner resistance of battery.** Batteries are then always discharged to same level, regardless how big currents are drawn. The value of set residual energy is therefore only little dependent on the features of battery and the discharging current. For example for switching voltage 3.7V per cell controller switches off the motor or starts to reduce revolutions always after 90% of energy is used up no matter if the drawn current is 10C or 2c. (The voltage of accumulator after switch of the current always rises to a value close to curve of 0.5V – this discharging curve is close to „inner“ voltage of battery. This curve describes how much the controller is discharged).


The controllers efficiently **mask interference and drop-outs** up to 1,5 sec. When long-lasting drop-outs or interference occur the controller slowly reduces motor revolutions. After the signal is resumed the controller continuously gets to the requested power. Long lasting drop out of signal (or its absence) is indicated acoustically by motor as well as by LED. This can be used for example when searching for lost model.

Without the proper signal from the transmitter (e.g. transmitter is turned off), **the motor neither jerks nor runs but is at standstill**

**Thermal fuse of the controller is set to 90°C** when performance is reduced to ca 60%. After cooling off (even in flight) the reduction is disabled. After switching on, the temperature above 70°C is monitored; if the temperature is higher the controller does not start. New start is possible only after the controller temperature falls.

**Error messages** (the controller must be switched off to correct error, then switched on again):

- throttle stick was moved the opposite way then it is supposed to (the thrtolle stick was not in the min or max position at the beginning, and after beep it was moved to the max or min position to which .... the throttle was closer and not the other (correct way)
- low size of deflection of the throttle stick on the transmitter – you must shorten the size of deflection on transmitter
- overstep max. throttle position 0,5 and 2,5 ms – you must shorten the size of deflection
- starting an overheated controller
- more or less cells than specified
- current overload (resumes operation after dropping throttle to zero, it is not necessary to switch the controller off in this case)
- signal drop out for long time
- continual beep after switch on – data in EEPROM have been disturbed. **The controller is set to default setting.** It is necessary to program it again

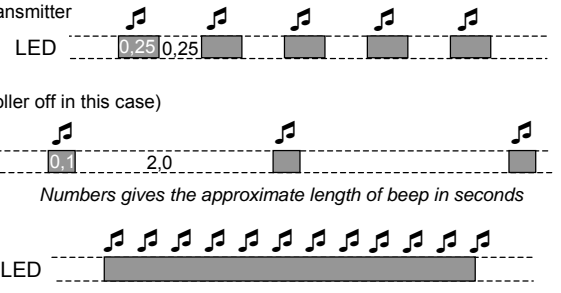

**WARNING :**

**You risk destroying the controller for:**

- connecting more battery cells to the controller than the max. number specified in the technical data
- reversing connections to the accumulator
- shortcutting of wires to motor when batteries are connected
- changing motor and accumulator outlets
- overloading of the BEC with bigger currents or bigger power loss than is specified in technical data
- water in the controller (except for „hydro“ versions“)
- metal objects in the controller (screwdrivers, wires, etc.)
- disconnecting the controller from batteries or turning off the controller while motor is running (or still turning)

**Operating data:**

<b>Temperature of the environment:</b>	0°C to 40°C	<b>Number of regulation steps:</b>	1024 / full throttle
<b>Motor controlling:</b>	PWM 8 kHz	<b>Max. rpm for 2 poles motor:</b>	~200 000 rpm
<b>Control signal:</b>	positive pulses $1,5 \pm 0,5$ ms, period $10 \div 30$ ms		
<b>User set parameters:</b>	see programming		
<b>MEGA BEC+:</b>	5V or 6V / max. 4,0 A (power losses 5W continuous, 10W / 10 sec., 15W / 5 sec., max. 20W, see graph)		
<b>Power supply:</b>	from batteries only: NiCd, NiMH, Li-Ion, Li-Pol		
<b>Suitable for motors:</b>	Mega AC, Model Motors, MP JET, PJS, Überall model, Hacker, Kontronik, LRK, Plettenberg, etc. for 2 to 20 pole motors of classical conception (rotor inside) and also for outrunners (rotor is on the outer side). for the best cooling of the controllers is used water-cooling.		

**Cooling:****Water proof:**

for better resistance for humidity or water are these versions made with water proof protective coating ("WP" version).

TMM® xxxx-3 Z-series V 5.4x:	1812-3	2512-3	3312-3	4412-3
<b>Dimensions [mm]:</b>	28×25×11	28×25×11	36×28×11	36×28×11
<b>Dimensions (with external capacitor) [mm]:</b>	44×25×11	44×25×11	51×28×11	51×28×11
<b>Weight incl. all conductors:</b>	29 g	31 g	58 g	58 g
<b>Weight without power conductors (with servocable):</b>	22 g	22 g	44 g	44 g
<b>No. of feeding NiCd/NiMH cells:</b>	6 – 12	6 – 12	6 – 12	6 – 12
<b>No. of feeding Li-Ion / Li-Pol cells:</b>	2 – 4	2 – 4	2 – 4	2 – 4
<b>Max. current (for full throttle):</b>	18 A	25 A	33 A	44 A
<b>Max. current for 5 sec.:</b>	23 A	30 A	40 A	55 A
<b>On-state switch resistance at 25 °C:</b>	2×3,7 mΩ	2×3,1 mΩ	2×2,9 mΩ	2×1,2 mΩ
<b>Model:</b>	MEGA BEC+	MEGA BEC+	MEGA BEC+	MEGA BEC+
<b>BEC voltage:</b>	5 / 6 V	5 / 6 V	5 / 6 V	5 / 6 V
<b>Power conductors (90 mm):</b>	1,0 mm <sup>2</sup>	1,5 mm <sup>2</sup>	2,5 mm <sup>2</sup>	2,5 mm <sup>2</sup>
<b>JR gold connector, cables:</b>	0,25 mm <sup>2</sup>	0,25 mm <sup>2</sup>	0,25 mm <sup>2</sup>	0,25 mm <sup>2</sup>

TMM® xxxx-3 Z-series V 5.4x:	6012-3	8012-3	6016-3	8016-3	12016-3	16016-3	22412-3	22416-3
<b>Dimensions [mm]:</b>	50×31×22	50×31×22	50×31×22	50×31×22	50×31×25	50×31×28	50×31×28	50×31×28
<b>Dimensions (with external capacitor) [mm]:</b>	62×31×22	62×31×22	65×31×22	65×31×22	65×31×25	65×31×28	65×31×28	65×31×28
<b>Weight incl. all conductors:</b>	80 g	82 g	80 g	82 g	108 g	116 g	119 g	119 g
<b>Weight without power conductors:</b>	65 g	67 g	65 g	67 g	77 g	85 g	88 g	88 g
<b>No. of feeding NiCd/NiMH cells:</b>	6 – 12	6 – 12	7 – 16	7 – 16	7 – 16	7 – 16	6 – 12	7 – 16
<b>No. of feeding Li-Ion / Li-Pol cells:</b>	2 – 4	2 – 4	3 – 5	3 – 5	3 – 5	3 – 5	2 – 4	2 – 5
<b>Max. current (for full throttle):</b>	60 A	80 A	60 A	80 A	120 A	160 A	224 A	224 A
<b>Max. current for 5 sec.:</b>	70 A	100 A	70 A	100 A	150 A	200 A	260 A	260 A
<b>On-state switch resistance at 25 °C:</b>	2×1,0 mΩ	2×0,67 mΩ	2×1,0 mΩ	2×0,67 mΩ	2×0,44 mΩ	2×0,33 mΩ	2×0,20 mΩ	2×0,20 mΩ
<b>Model:</b>	MEGA BEC+	MEGA BEC+	MEGA BEC+	MEGA BEC+	OPTO	OPTO	MEGA BEC+	OPTO
<b>BEC voltage:</b>	5V / 6V	5V / 6V	5V / 6V **)	5V / 6V **)	--	--	5V / 6V	--
<b>Power conductors 90 mm (120 mm for 4 mm<sup>2</sup>):</b>	2,5 mm <sup>2</sup>	2,5 mm <sup>2</sup>	2,5 mm <sup>2</sup>	2,5 mm <sup>2</sup>	4 mm <sup>2</sup> *)	4 mm <sup>2</sup> *)	4 mm <sup>2</sup> *)	4 mm <sup>2</sup> *)
<b>JR gold connector, cables:</b>	0,25 mm <sup>2</sup>	0,25 mm <sup>2</sup>	0,25 mm <sup>2</sup>	0,25 mm <sup>2</sup>	0,15 mm <sup>2</sup>	0,15 mm <sup>2</sup>	0,25 mm <sup>2</sup>	0,15 mm <sup>2</sup>

TMM® xxxx-3 Z-series V 5.4x:	4024-3	8024-3	12024-3	16024-3	4032-3	6032-3	9032-3	12032-3
<b>Dimensions [mm]:</b>	50×31×19	50×31×22	50×31×25	50×31×28	50×31×22	50×31×22	50×31×25	50×31×28
<b>Dimensions (with external capacitor) [mm]:</b>	80×31×19	80×31×22	80×31×25	80×31×28	80×31×22	80×31×22	80×31×25	80×31×28
<b>Weight incl. all conductors:</b>	76 g	85 g	111g	120 g	83 g	85 g	111 g	120 g
<b>Weight without power conductors:</b>	62 g	70 g	80g	89 g	68 g	70 g	80 g	89 g
<b>No. of feeding NiCd/NiMH cells:</b>	7 – 24	7 – 24	7 – 24	7 – 24	7 – 32	7 – 32	7 – 32	7 – 32
<b>No. of feeding Li-Ion / Li-Pol cells:</b>	3 – 8	3 – 8	3 – 8	3 – 8	3 – 10	3 – 10	3 – 10	3 – 10
<b>Max. current (for full throttle):</b>	40 A	80 A	120 A	160 A	40 A	60 A	90 A	120 A
<b>Max. current for 5 sec.:</b>	50 A	100 A	150 A	200 A	50 A	70 A	110 A	150 A
<b>On-state switch resistance at 25 °C:</b>	2×1,4 mΩ	2×0,7 mΩ	2×0,47 mΩ	2×0,35 mΩ	2×1,5 mΩ	2×1,0 mΩ	2×0,67 mΩ	2×0,50 mΩ
<b>Model:</b>	OPTO	OPTO	OPTO	OPTO	OPTO	OPTO	OPTO	OPTO
<b>BEC voltage:</b>	--	--	--	--	--	--	--	--
<b>Power conductors 90 mm (120 mm for 4 mm<sup>2</sup>):</b>	2,5 mm <sup>2</sup>	2,5 mm <sup>2</sup>	4 mm <sup>2</sup> *)	4 mm <sup>2</sup> *)	2,5 mm <sup>2</sup>	2,5 mm <sup>2</sup>	4 mm <sup>2</sup> *)	4 mm <sup>2</sup> *)
<b>JR gold connector, cables:</b>	0,15 mm <sup>2</sup>	0,15 mm <sup>2</sup>	0,15 mm <sup>2</sup>	0,15 mm <sup>2</sup>	0,15 mm <sup>2</sup>	0,15 mm <sup>2</sup>	0,15 mm <sup>2</sup>	0,15 mm <sup>2</sup>


\*) Note.: on request 2×2,5 mm<sup>2</sup> or 2×4,0 mm<sup>2</sup>

\*\*) Note.: BEC voltage is automatically off for battery voltage higher then 17V (4 Lipol or 12 Nixx cells). It is need use external battery for receiver and servos supply.

The appearance and operating data may be changed without prior notice




# PROGRAMMING TMM xxxx – 3, Z-series RB

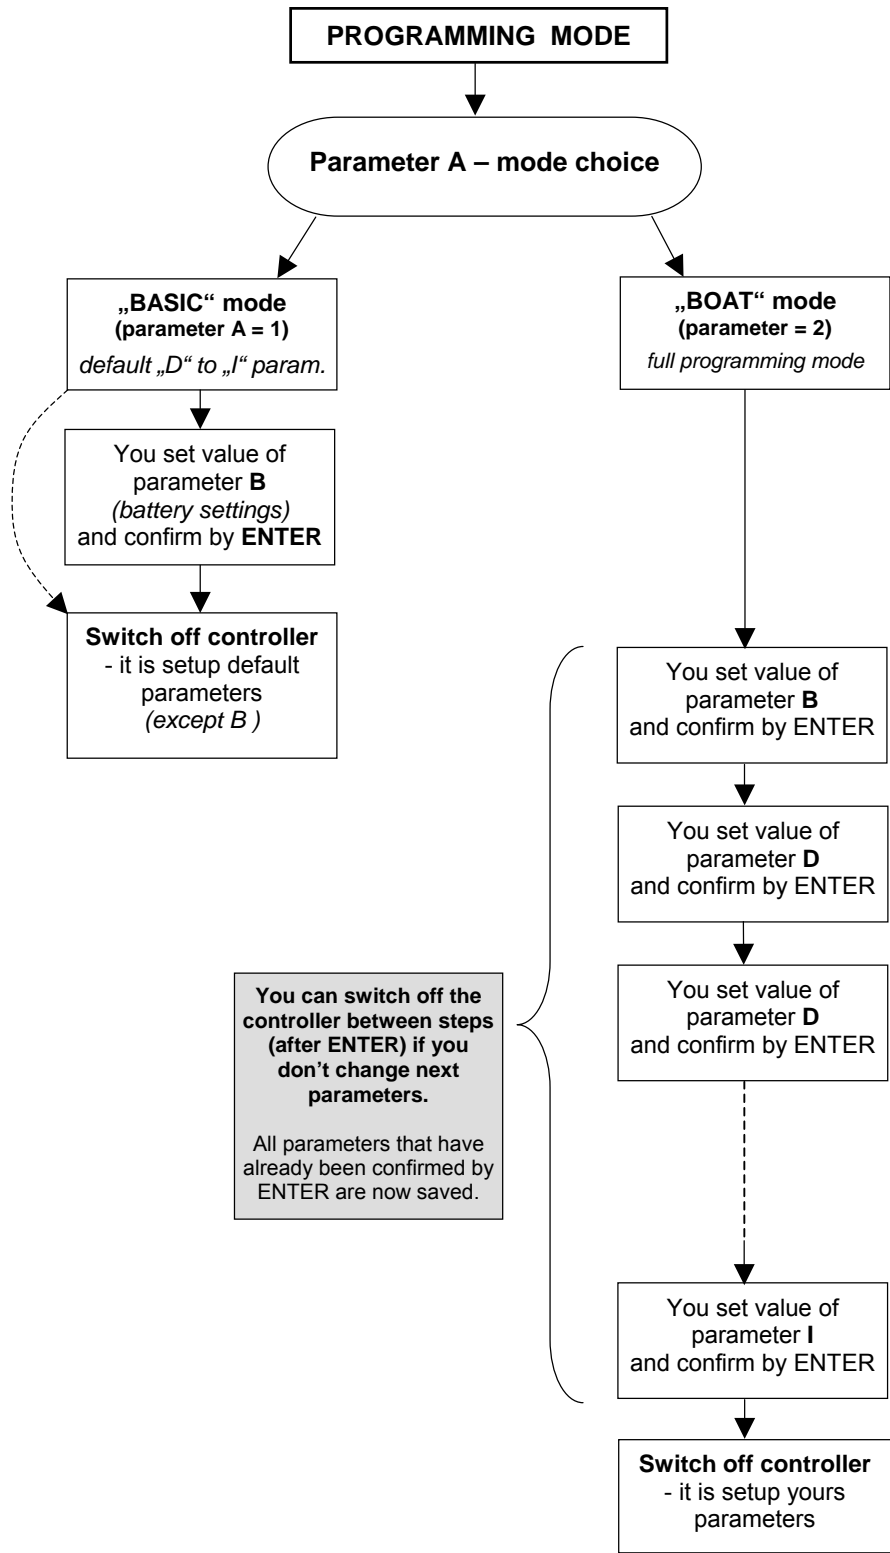


**PROGRAMMING TMM xxxx – 3, Z-series RB**


**Lipol battery setup in BASIC mode**

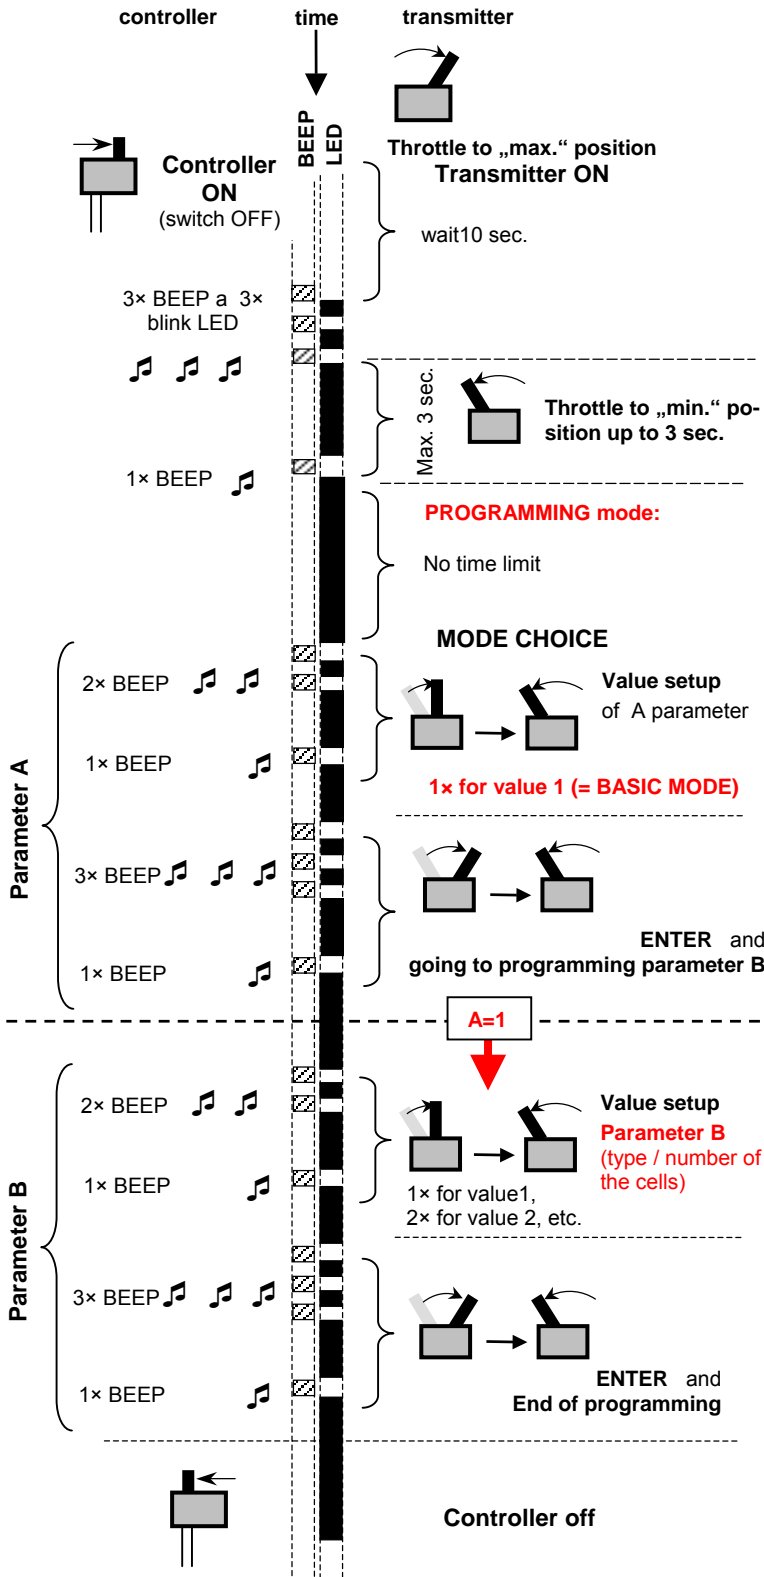


**Default parameters setup (factory parameters)**

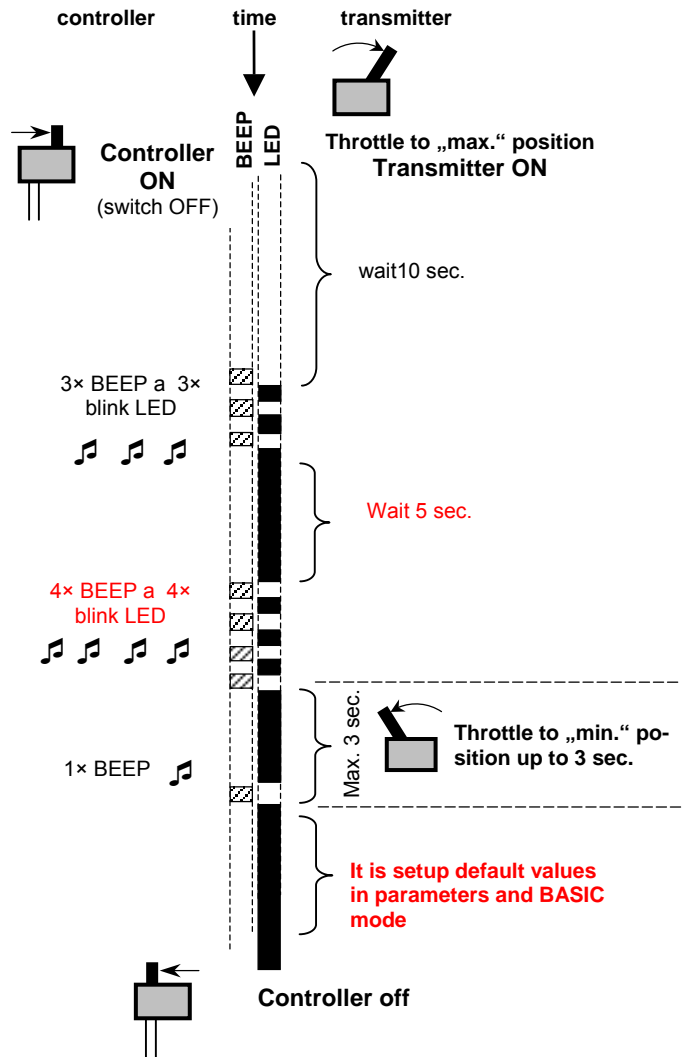


**Legend:**

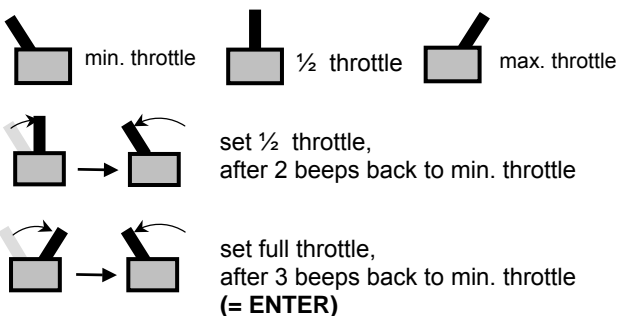

# PROGRAMMING TMM xxxx – 3, Z-series RB

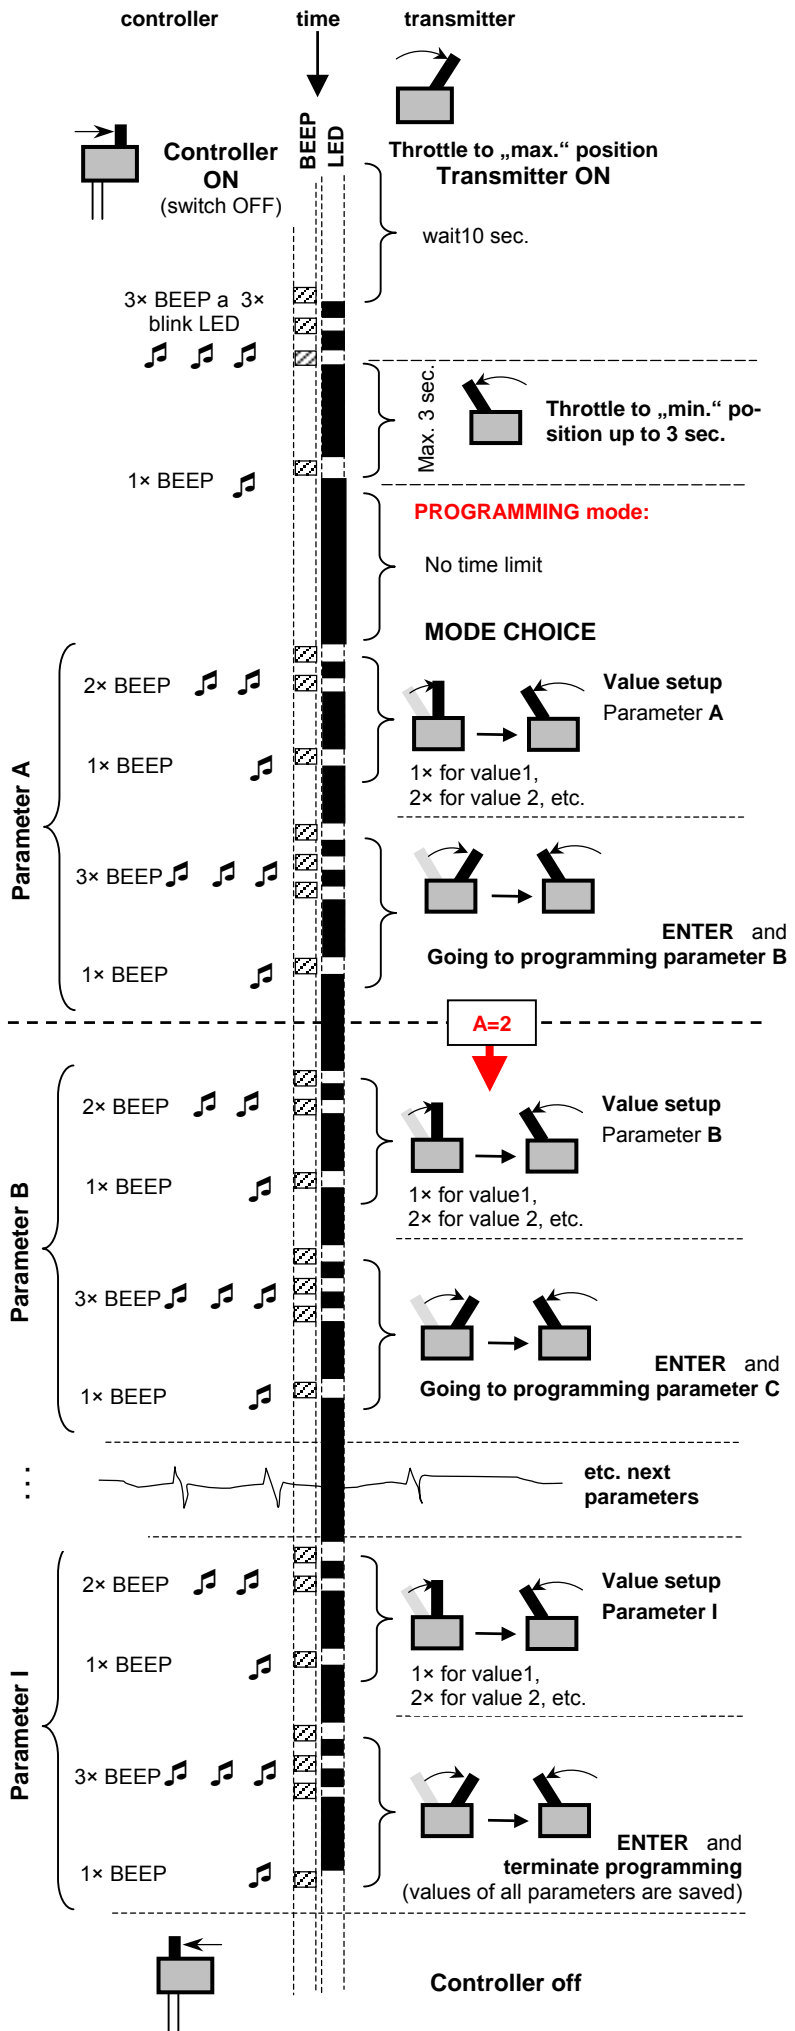

### Legend:

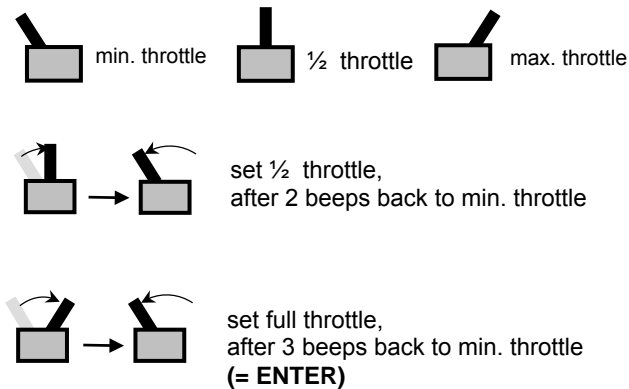

**A) Programming: Basic mode, 3 Lipol cells.**

- 1) Switch the controller on with throttle stick in full throttle position
- 2) Switch the controller on (If basic mode is already programmed, the controller will beep 2x – ignore this). After 10 seconds the controller will beep 3x and the LED will blink and stay lit. Move throttle to brake position, motor beeps once, Led blinks once – you have entered programming mode and you can program the first parameter A (see table)
- 3) Move the throttle to ½ of full throttle (idle position), LED blinks twice and motor beeps twice. Move throttle back to min position, LED blinks 1x and motor beeps. (parameter A=1, that is basic mode).
- 4) This setting has to be confirmed by ENTER sequence. Move throttle to full throttle position, LED blinks 3x and motor beeps 3x. Move throttle back to min position – LED blinks 1x and motor beeps 1x = ENTER, the Basic mode has been set.
- 5) Move the throttle to ½ of full throttle (idle position), LED blinks twice and motor beeps twice. Move throttle back to min position, LED blinks 1x and motor beeps. (parameter B=1) Repeat this 2x and parameter B will be set to value 3 (B=3, that is 3 Lipol cells).
- 6) This setting has to be confirmed by ENTER sequence. Move throttle to full throttle position, LED blinks 3x and motor beeps 3x. Move throttle back to min position – LED blinks 1x and motor beeps 1x = ENTER, 3 Lipol cells have been set
- 7) Switch the controller off, programming is finished.
- 8) Now, you wish to start with brake on.
- 9) Turn controller on with throttle in min position. Controller beeps once.
- 10) You may start now, maximal of throttle position is set automatically.

**B) Programming: BOAT mode, 4 Lipol cells, acceleration 0.16 sec., 6V BEC voltage**

- 1) Turn the transmitter on with throttle in max. position
- 2) Switch the controller on (If basic mode is already programmed, the controller will beep 2x – ignore this). After 10 seconds the controller will beep 3x and the LED will blink and stay lit. Move throttle to brake position, motor beeps once, Led blinks once – you have entered programming mode and you can program the first parameter A (see table)
- 3) Move the throttle to ½ of full throttle (idle position), LED blinks twice and motor beeps twice. Move throttle back to min position, LED blinks 1x and motor beeps. Repeat this once more (parameter A=2, BOAT mode).
- 4) This setting has to be confirmed by ENTER sequence. Move throttle to full throttle position, LED blinks 3x and motor beeps 3x. Move throttle back to min position – LED blinks 1x and motor beeps 1x = ENTER, BOAT mode has been set
- 5) Move the throttle to ½ of full throttle (idle position), LED blinks twice and motor beeps twice. Move throttle back to min position, LED blinks 1x and motor beeps. (parameter B=1) Repeat this 3x and parameter B will be set to value 4 (B=4, that is 4 Lipol cells).
- 6) This setting has to be confirmed by ENTER sequence. Move throttle to full throttle position, LED blinks 3x and motor beeps 3x. Move throttle back to min position – LED blinks 1x and motor beeps 1x = ENTER, 4 Lipol cells have been set
- 7) Move the throttle to ½ of full throttle (idle position), LED blinks twice and motor beeps twice. Move throttle back to min position, LED blinks 1x and motor beeps. (parameter D=1), (D=1, acceleration 0.16 sec.).
- 8) This setting has to be confirmed by ENTER sequence. Move throttle to full throttle position, LED blinks 3x and motor beeps 3x. Move throttle back to min position – LED blinks 1x and motor beeps 1x = ENTER, 0.16 sec. acceleration time has been set
- 9) You do not wish to change parameter E – timing. This parameter will be skipped over by ENTER (value of E=0). Move throttle to full throttle position, LED blinks 3x and motor beeps 3x. Move throttle back to min position – LED blinks 1x and motor beeps 1x = ENTER, parameter has been skipped with no change
- 10) You do not wish to change parameter G – residual energy. This parameter will be skipped over by ENTER (value of G=0). Move throttle to full throttle position, LED blinks 3x and motor beeps 3x. Move throttle back to min position – LED blinks 1x and motor beeps 1x = ENTER, parameter has been skipped with no change
- 11) Move the throttle to ½ of full throttle (idle position), LED blinks twice and motor beeps twice. Move throttle back to min position, LED blinks 1x and motor beeps. Repeat once more. Parameter H=2, BEC voltage = 6V
- 12) This setting has to be confirmed by ENTER sequence. Move throttle to full throttle position, LED blinks 3x and motor beeps 3x. Move throttle back to min position – LED blinks 1x and motor beeps 1x = ENTER, 6V BEC voltage has been set.
- 13) Because you do not wish to change following parameters, switch the controller off. Programming is finished.
- 14) When the controller is switched on again, only move throttle to min position (if it was not already there), controller beeps once and you may start with newly set parameters.

**The very first programming using PC (only Expert or Z-series controller or controller with BB\_03):**

(Does not apply if you have already programmed the controller using transmitter)

Because the real min and max throttle positions of your transmitter (together with changes that the receiver causes) are not known it is strongly recommended to find out the real values through the following procedure with your transmitter and receiver:

- 1) turn the transmitter on and move the throttle to max. position
- 2) turn the controller on
- 3) wait for 3 beeps
- 4) move the throttle to min. position
- 5) controller beeps once, you have entered the programming mode and the controller knows real min. and max. position
- 6) turn the controller, and transmitter off


Now you may start programming using computer. When the controller is connected with the computer, „Controller“ program will read all values from the controller together with real values of min. an max. throttle position of your RC set. If you now change any parameters and save them in the controller they will be saved with the real values of min. and max. throttle position (you can see these values on the left side of “controller” window). It is now possible to program the controller using PC anytime without finding the real throttle min. and max. positions (steps 1 to 6) again.

If the procedure for finding real min. and max. throttle position is skipped before the first programming, „Controller“ program will read out default throttle positions which are most likely not similar to those of your RC set. This may lead to two cases:


- first, the whole throttle range will not be used (real throttle range is bigger than default – case a)
- or second, which is worse, the controller will wait for the throttle to get to min. position which will not happen as the real value is bigger than the default one – case b) and it will seem that the controller is not working.

**Procedure steps 1) to 6) are recommended to use if you change transmitter or its deflections are changed. It is also recommended for receiver changes – different receivers have different control pulse on channel output (for the same transmitter)!!**

**a) Better case – whole throttle range not used**

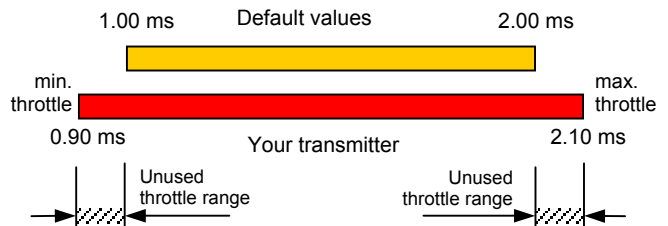

**b) Worse case – controller will not start**

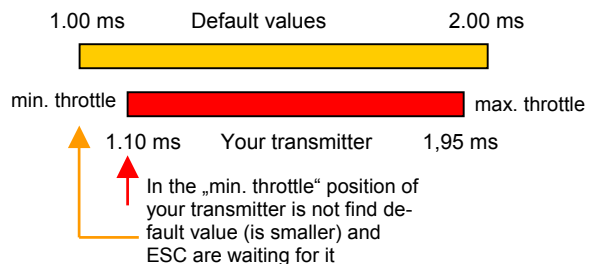

(The controller always waits after turning on for the throttle stick to get in min before starting – this is a safety precaution so that the throttle does not start unexpectedly)